



SmokeStik

Please read this User's Manual completely before use to ensure full and proper function of your newly purchased SmokeStik®. Please keep this manual in good condition and readily accessible for future reference.

<http://www.smokestik.com>

INSTRUCTION MANUAL

SmokeStik®

Congratulations and thank you for purchasing the SmokeStik®

Special Notes

Product Has an 8 to 10 Second Cutoff:

If your puff is longer than eight to ten seconds, your SmokeStik® “cuts-off” to prevent overheating.

Preventing Over Usage:

If you take more than 16 puffs within one minute, your battery will flash continuously 10 times to indicate over-usage.

Please refer to this manual’s Troubleshooting page if your SmokeStik® is not working properly. If you are still unable to ascertain the problem, please contact Customer Support through our e-mail: service@us.smokestik.com or call 1-877-964-7800 EX 400 M-F 9:00 a.m. to 5:00 p.m. EST or look at our FAQ section at: <http://www.smokestik.com/pages/FAQ.html>

Table of Contents:

SmokeStik®	3
Special Notes	3
Product Has an 8 to 10 Second Cut-off:	3
Preventing Over-Usage:	3
Product Information	5
What is a SmokeStik®?	5
Key Product Benefits	6
How Does it Work?	7
Battery Components and Charger	8
Instructions for First Time Use	9
Replacing the Cartomizer	10
Cartomizer FAQ's	10
How long will a cartomizer last?	10
How do I know when the cartomizer is finished?	10
Replacing the Battery	11
Battery FAQs	11
How do I re-charge my battery?	11
How do I know when to re-charge my battery?	11
How often do I need to recharge the battery, and how long does it take?.....	11
Troubleshooting	12
Cautions	12
Warning	13

Product Information

What is a SmokeStik®?

A SmokeStik® is a revolutionary device that resembles a traditional cigarette and recreates the smoking experience, including a smoke-like vapor.

It is free of carbon monoxide, tar and other known cancer-causing chemicals created when traditional cigarettes and cigars burn.

A SmokeStik® is essentially litter-less in that it is free of ashes and stubs. Also, it is much safer since it is free of fire. What you are "smoking" is a mist or vapor. This vapor is created as a tiny amount of liquid is vaporized by the cartomizer.

Key Product Benefits

- No Strong odor
- No Second-hand smoke
- Environmentally friendly: Free of ashes and stubs, cartridges are recyclable
- No ignition required, product remains cool to the touch
- Free of tobacco
- Emits only a harmless vapor
- Saves you money on cigarettes and nicotine replacement therapies

How does it Work?

The mouthpiece contains a liquid which is comprised of water, propylene glycol, glycerin and FDA approved flavoring agents, and where allowed it can contain nicotine.

When you take a puff on the SmokeStik® the air flow is detected by a tiny sensor. A microprocessor then activates the atomizer (heater) which vaporizes the liquid solution. This produces a vapor mist which you inhale. An LED at the tip of the device is also activated to indicate that the device is working and helps simulate the act of smoking. A high-density Lithium Ion battery powers the device and can last all day on a normal charge depending upon an individual's usage. Your starter kit will include two batteries so that you may use one while your second battery is recharging.

Battery Components and Charger

The SmokeStik® employs a special lithium battery and unique charger which cannot be replaced with other lithium batteries or chargers. The SmokeStik itself has the non removable battery inside of it. The input supply voltage of the charger must be AC100V-240V, 50/60Hz

AC/USB adapter

The SmokeStik Charger

The SmokeStik Charger (1) is a USB charger that can be plugged into the SmokeStik power supply (AC/USB adapter) (2), a computer USB Port, or the SmokeStik car adapter (3).

Using only one charger, now you can charge your SmokeStik at home, at work, or in your car when you are traveling.

At Home:

Plug the AC/USB adapter into an AC outlet (100volts- 240Volts). The green light on the AC/USB adapter will light up and stay green. Plug the SmokeStik USB charger into the AC/USB adapter. Attach (screw in) your SmokeStik. The tip of the SmokeStik may or may not light up (this is normal). The USB adapter will change colors from blue to red if your SmokeStik needs charging. If it stays blue, your SmokeStik is already charged. Typically it takes about 3 to 4 hours to fully recharge the battery.

At Work:

Plug your SmokeStik charger into a USB port on your computer.

In your car:

Plug the Car adapter into a 12 volt DC port in your car. The light on the Car Adapter will turn red to show you that it has power. Plug your SmokeStik Charger into the end of the Car Adapter and charge your SmokeStik.

Anywhere!

SmokeStik also offers an Emergency Charger that uses two standard disposable AA batteries along with your USB charging cord. You can now charge your SmokeStik literally anywhere you are!



SmokeStik Charger (1)



SmokeStik power supply
(AC/USB adapter)(2)



SmokeStik car Adapter (3)



SmokeStik Emergency
Charger w/flashlight

Instructions for First Time Use

Shown below are the two main components to your new SmokeStik®:



Cartomizer

Battery

Open the packaging of a new cartomizer and gently screw the cartomizer onto the battery. When fully assembled, it should resemble the picture below:



Once assembled, your unit is ready for use. Taking a puff on the SmokeStik® should immediately activate it and you should see the tip light up. If this does not happen, you may need to charge the battery. Refer to the section on replacing your battery for further information.

Replacing the Cartomizer

When your cartomizer runs out, your SmokeStik® will stop producing vapor and you will notice that the flavor of the product is gone. When this happens, you will need to replace the cartomizer.

To replace the cartomizer, simply unscrew it and discard. Open a new cartomizer and gently screw it onto the battery. Cartomizers are disposable and cannot be re-used.

Cartomizer FAQ's

How long will a cartomizer last?

That depends on your usage patterns. Light users will go through 1 cartomizer every 2-3 days, while heavy users may go through 1 or more per day.

How Do I know when the cartomizer is finished?

When your cartomizer runs dry, your SmokeStik® will stop producing vapor and you will notice that the flavor of the product is gone. When this happens, you will need to replace the cartomizer.

Replacing The Battery

To change the battery in your SmokeStik®, gently unscrew the battery from the cartomizer. To charge that battery, simply screw the battery into the charger. In the meanwhile, gently screw your fully charged, back-up battery into the cartomizer for continued product use.

Battery FAQs

How Do I recharge my battery?

USING THE OLD CHARGER THAT HAS A RED AND BLUE OR GREEN LIGHT:

Simply screw the battery into the charger. At this point, the charger's indicator light will change from blue or green to red. Once the charge is complete, the indicator light changes back from red to blue or green

USING THE NEW CHARGER THAT HAS A RED LIGHT ONLY:

Simply screw the battery into the charger. At this point the chargers indicator light will stay red. The tip of the SmokeStik battery should light up. Once the battery is charged the light on the tip of the SmokeStik battery will turn off. The light on the charger will stay red throughout the process.

How Do I know when to recharge my battery?

When your battery begins to flash continuously for about 9 seconds, you will need to re-charge your battery.

How often do I need to recharge the battery, and how long does it take?

Typically it takes about 3 to 4 hours to fully recharge the battery. Keep in mind, your SmokeStik® package includes 2 batteries so that you can recharge one while the other is in use. The frequency of recharging your battery will depend on how often you puff on it.

When use the old charger...The LED light on your SmokeStik may or may not stay lit during the charging process; either way is normal.

Troubleshooting

1. When the indicator light flashes continuously for approximately nine seconds, this indicates a need to recharge your battery.
2. A decrease in smoke volume usually indicates the need for a new cartomizer. If a new cartomizer does not resolve the issue, use a freshly charged battery.
3. Always ensure that the cartomizer is secured properly to the battery and screwed on tightly.
4. Ensure that cartomizers are stored in a cool, dry place. It is best to store your boxes vertically instead of on their side. Do NOT refrigerate. Cold cartomizers will not produce the same amount of vapor.
- 5. If you should encounter other problems, please do not hesitate to contact SmokeStik Customer Service at 1-877-964-7800 ext. 400, Monday through Friday, 9:00 a.m. to 5:00 p.m. EST. or look here:**

<http://www.smokestik.com/pages/FAQ.html> for further troubleshooting tips.

You can also contact us via email at: service@us.smokestik.com

Cautions

1. Keep the SmokeStik® away from high temperatures at all times. Never leave inside a car or glove box.
2. Keep the SmokeStik® and its components away from children and pets.
3. If you experience an adverse reaction after using this product, discontinue use immediately. If you have any chronic medical condition consult your own doctor or pharmacist before using the SmokeStik.
4. Keep your charged battery away from metal articles in your pockets, purse, or other storage containers. The conductors can cause a short circuit, heating or damage to the battery components.
5. Although the SmokeStik® is not a tobacco product, we advise that you abide by local laws and be socially considerate when using this product.

Warning

SmokeStik® products are intended for use by persons of legal smoking age, not by nonsmokers or by children, women who are pregnant or breastfeeding, or persons with or at risk of heart disease, high blood pressure, diabetes, or taking medicine for depression or asthma. Nicotine is a drug and may interact with other drugs.

Consult a physician if you experience symptoms such as nausea, vomiting, dizziness, diarrhea, weakness and rapid heartbeat. If you smoke tobacco products, you are encouraged to stop.

SmokeStik® products are not smoking cessation products and have not been tested as such.

Please keep SmokeStik® products out of the reach of children and pets; ingestion of certain pieces can present a choking hazard, and ingestion of large amounts of non-vaporized concentrated ingredients in the cartridges can be poisonous.

These statements and SmokeStik® products are not intended to diagnose, treat, cure, or prevent any disease. SmokeStik® cartomizers may be packaged and assembled in the USA.

Any questions regarding this manual, please direct them to service@us.smokestik.com or call SmokeStik Customer Service at 1-877-964-7800 ext. 400, Monday through Friday, 9:00 a.m. to 5:00 p.m. EST